 


• Features

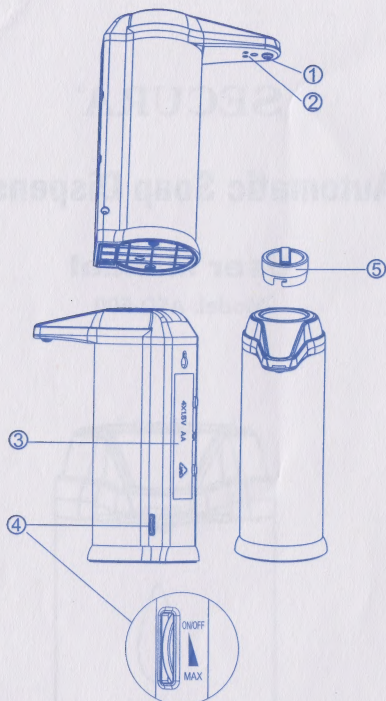


1. Spout
2. Infrared sensor sender
3. Battery compartment
4. On/Off Switch & Liquid Soap Volume Control
5. Container lid

• Technical Data

Dimension	L155*W85*H220mm L6.1*W3.3*H8.7 in
Vol	500ml/16.9 oz.
Liquid dosage	1.0~5.5ml/0.03~0.19 oz.
Unit weight	420g/0.9 lb
Plastic material	ABS, PC
Battery type	1.5V "AA" alkaline
Rated volt	DC6V
Static current	60uA
Work current	250mA
Sensor range	0~7cm/0~2.75 in.

 • Installation

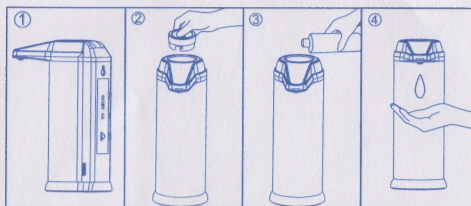

1. Insert 4 "AA" batteries into the battery compartment according to the diagram in the battery compartment.
2. Open the container lid. (Figure 2)
3. Fill with liquid soap. (Figure 3)
4. Turn the On/Off switch to "On" and adjust the soap volume control to the middle of its setting.
5. Put your hand under the sensor within 0~2.75 in to let the dispenser start to work. (For first time use, repeat this process several times until the soap begins to dispense). (Figure 4)

• Liquid Soap Volume Control

1. The volume of liquid soap dispensed can be adjusted from 0.03~0.19 oz. by rotating the On/Off switch.
2. Rotating the On/Off switch towards the bottom of the dispenser will increase the amount of soap dispensed. Rotating it in the opposite direction will decrease the amount of soap dispensed.

• If Dispenser Doesn't Work

1. Make sure the batteries are placed in the battery compartment correctly and that they are fresh.
2. Check that the On/Off switch has been switched to the "On" position.

• If Soap is not Dispensed

1. If this is the first use of the dispenser, place your hand under the sensor (within 0~2.75 in) several times until the soap begins to flow out of the spout.

2. The liquid soap could become congealed in the spout or dispensing tube due to lack of use of the dispenser or cold/dry weather. If that is the case, pour out any soap remaining in the container, fill the container with warm soapy water and then operate the dispenser several times until the water begins to dispense from the spout. Pour out any remaining soapy water and refill the container with liquid soap.

• Attention

1. Place the dispenser on a flat, level surface.
2. If wall mounting, do not install the dispenser above a mirrored surface or close to running water, as this might cause it to activate unnecessarily.
3. This product is for indoor use. Exposure to direct sunlight will destroy the sensor system.
4. Use liquid soap with a low concentration of alcohol.
5. Avoid placing this product in areas where it could become covered in water.
6. Keep the liquid clean.
7. If you will not be using the dispenser for an extended period of time, empty the container of soap, clean the dispenser out and remove the batteries. Store it in a dry place.
8. Do not subject the On/Off switch to too much exposure to water.

• Cleaning

1. Clean the dispenser's surface with wet towel, battery compartment with dry towel.

Secura, Inc.
888-792-2360
CustomerCare@thesecura.com
Brookfield, Wisconsin
www.thesecura.com

© 2017 SECURA, INC.

SECURA®

Manufacturer's Limited Warranty

The Manufacturer of the product warrants to the original purchaser of this product from an authorized reseller or distributor that this product will be free from defects in material and workmanship under normal use and service for 2 years after date of purchase. Manufacturer will, at its option, repair or replace with new or refurbished product. The manufacturer reserves the right, before having any obligation under this limited warranty, to inspect the damaged product, and all costs of shipping the damaged product for inspection and warranty service shall be borne solely by the purchaser.

The manufacturer's limited warranty is valid only in accordance with the following conditions:

1. The product is purchased directly from manufacturer or an authorized reseller. The warranty is not transferable, only the original purchaser is covered by this warranty.
2. This warranty is void if the product is used in a commercial or institutional establishment.
3. This warranty is void if the product has been subject to misuse, abuse, negligence, unauthorized modification or repair, or accident. Normal wear and tear are not covered by this warranty.
4. Purchaser must present acceptable proof of original receipt for the product.
5. This warranty does not affect any other legal rights you may have by operation of law.

Secura, Inc.
CustomerCare@thesecura.com
Brookfield, Wisconsin

SECURA®

Secura, Inc.
888-792-2360
CustomerCare@thesecura.com

www.thesecura.com

Brookfield, Wisconsin

For the fastest processing of a warranty claim, the Purchaser should e-mail CustomerCare@thesecura.com and include the product name and model #, proof of original purchase, complete contact information, and detailed information about the issue, including pictures when applicable.

All information current at time of printing.

 
NA-EN-122217

SECURA®

Automatic Soap Dispenser

User Manual

Model: ASD-500

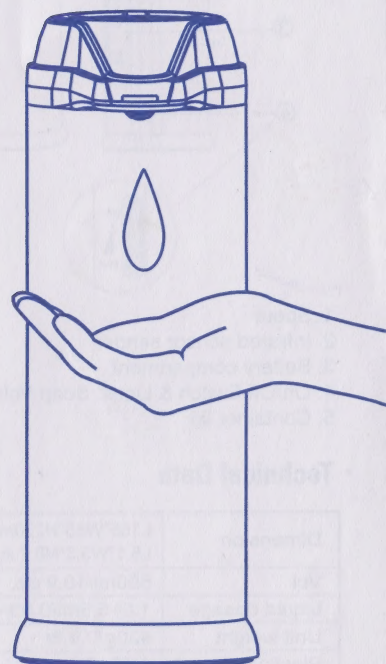

SAVE THESE INSTRUCTIONS
Household use only, not for commercial use.